

PREVENTATIVE MAINTENANCE

1.0 DAILY

- Before use, inspect the liftgate for damage to mounting assemblies, mechanical parts, and hydraulic components and hoses. Any noticeable defects must be repaired prior to operation to avoid damage and possible injury.

2.0 MONTHLY MAINTENANCE

- Every 1000 cycles or 30 days (which ever occurs first) all pivot points should be lubricated using EP2 chassis grease. In severe winter conditions it may be necessary to lubricate more frequently.
- Lubricate linkage pivot points with WD40 or light engine oil.
- Check oil level in reservoir.

3.0 YEARLY MAINTENANCE

- Once a year change the oil and oil filter. When filling pump reservoir use a funnel with a fine mesh screen. Use Dextron III transmission fluid.
- Inspect all decals and replace any that are not clearly visible or legible.

4.0 BI-YEARLY MAINTENANCE

- Every 24,000 cycles or 2 years (which ever occurs first) disassemble the liftgate and inspect all pivot points for wear, replace any pins or part that show signs of wear.
- Replace seal kit in cylinder, also replace any worn hydraulic hoses.
- Undercoat all crossmembers by removing plugs in crossmembers, spray undercoat inside and replace plugs.