



**GATOR SUPERSAND BOND
FOR CONCRETE PAVER JOINTS UP TO 1"**

TDS Revision Date (dd/mm/yyyy): 26/04/2019

Page 1 of 5

01



TECHNICAL DATA SHEET

- Update:** April 26, 2019
Make sure you have an updated data sheet on hand.
Canada and U.S. dial **1-855-847-7767** or (450) 624-1611
- Description:** **SUPERSAND BOND** is a unique mixture of polymer binders and calibrated sand available in Beige and Slate Grey. The installation of **SUPERSAND BOND** is almost identical to using regular paver joint sand except for the application of water. Once **SUPERSAND BOND** sets, it becomes very firm and locks between the paver joints while still retaining flexibility and providing a long lasting, durable jointing material. **SUPERSAND BOND** is recommended for a variety of uses including pool decks, patios, footpaths, driveways, parking spaces, pavements etc.
- Features:**
- **Advanced Haze Free Technology.**
 - Can be used for joints up to a maximum of 1 inch and its ASTM C-144 gradation allows use in even the tightest joints.
 - OSHA silica crystalline compliant (OSHA 29 CFR 1926.1153).
 - Helps prevent weeds and damage caused by burrowing insects.
 - Helps prevent erosion due to wind, rain, and freeze thaw cycles.
 - For **Drainage application**, rain safe 1 hour after water activation. Works above 32°F (0°C).
 - Waterproof bags: Lay bag flat on its back, so front of the bag is facing you.
- Maintenance of paved surface:** When maintaining the paver surface, apply Gator Shampoo to clean the entire paved surface including the paver joints. Wash, rinse and remove any residue by using a hose and a watering gun set to shower with the normal maximum water pressure from any residential or commercial building (typically 80 psi).
- Clay pavers:** If used on clay pavers make sure they are 100% dry. Clay pavers tend to hold moisture, which can prematurely activate the **SUPERSAND BOND** while the sand is being spread over the paver surface, leaving a residue (always apply on a test area before using the **SUPERSAND BOND** on clay pavers).
- Moss:** **SUPERSAND BOND** will not cause nor prevent moss, mold or mildew. Moss, mold and mildew are caused by certain on site conditions including excess moisture, shade, absence of ventilation, inadequate cleaning or maintenance, presence of soil or other organic debris left on the product.
- Coverage:** Quantity required depends on the shape and size of the concrete pavers as well as the width of the joints.
- | Per 50 lb bag
(Paver 2-3/8" in height) | NARROW JOINTS | WIDE JOINTS |
|---|---------------|----------------|
| | 1/8" to 3/8" | 3/4" to 1-1/4" |
| Beige & Slate Grey | 65-85 sq. ft. | 22-42 sq. ft. |
- Please note:** **SUPERSAND BOND** can be applied when pavers are installed directly on open graded aggregates that lock or choke themselves. This means the polymeric sand will not migrate through the voids. Do not apply **SUPERSAND BOND** when the pavers are installed directly on aggregates with large voids.




GATOR SUPERSAND BOND FOR CONCRETE PAVER JOINTS UP TO 1"

TDS Revision Date (dd/mm/yyyy): 26/04/2019



REQUIRED SUB-SURFACE PREPARATION

SUPERSAND BOND is recommended for a variety of uses including pool decks, patios, footpaths, driveways, parking spaces, pavements etc. The concrete pavers must be installed on a drainage base system composed of 2 layers. The upper layer can have a maximum of 1 inch of bedding sand. The lower layer must have a minimum of 6 inches of crushed stone compacted at 98 % Proctor density. (See diagram below).

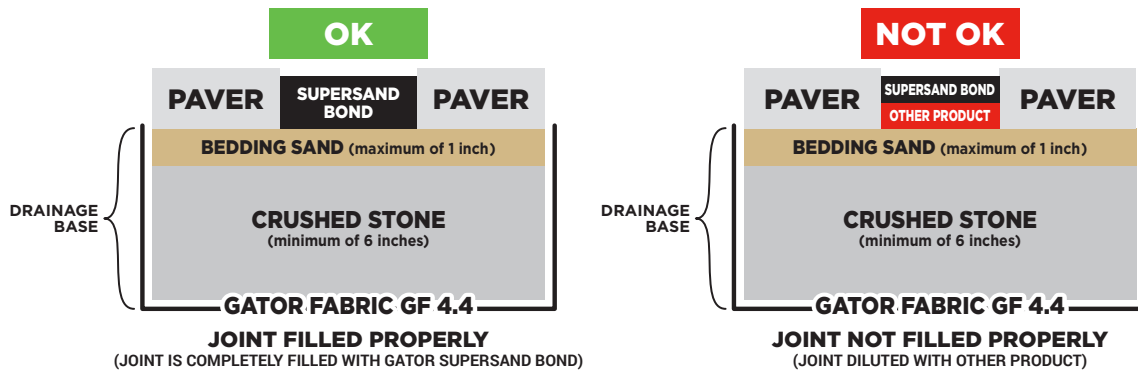

**NEVER USE SUPERSAND BOND WHEN PAVERS ARE INSTALLED ON A CONCRETE SLAB –
INSTEAD USE ALLIANCE GATOR MAXX SAND**

PREPARATION INFORMATION (IMPORTANT NOTES)

- A Always refer to the latest **SUPERSAND BOND** Technical Data Sheet (TDS) at AllianceGator.com before installing **SUPERSAND BOND**.
- B Pavers and slabs must be installed according to ICPI Tech Spec #2 (www.icpi.org) before **SUPERSAND BOND** installation. If pavers are installed over a concrete slab, (overlay application) **GATOR MAXX** polymeric sand must be used.
- C Pavers' sides and top surfaces must be completely dry. Do not apply if the paver surface is damp or wet. The damp or wet surface will cause **SUPERSAND BOND** to prematurely activate and will lead to the polymers sticking on the paver surface.
- D Do not apply if the paver joints are damp or wet. This will prevent the **SUPERSAND BOND** from properly sliding into the joints and obtaining very densely packed joints, which is critical to the products performance.
- E Temperature must be above 32°F (0°C) with dry conditions (no rain for at least 1 hour) after installing **SUPERSAND BOND**.
- F For all paver surfaces, and particularly around in-ground pools there must be a slope of 1/8 inch per linear foot away from the edge of the pool, or structures to ensure optimal performance of the **SUPERSAND BOND**.
- G For the pool coping units it is mandatory to use mortar in the joints. For the rest of the paver installation around the pool, you can use **SUPERSAND BOND**.
- H Do not sweep **SUPERSAND BOND** over asphalt.
- I Install **SUPERSAND BOND** a minimum of 1/8 inch below the paver surface or erosion may occur. The filled and cured polymeric sand joints should never be in direct contact with foot traffic or tires.
- J For textured or pre-finished surfaces, we recommend to remove all the sand from the paver or slab surface prior to using the plate or roller compactor.



GATOR SUPERSAND BOND FOR CONCRETE PAVER JOINTS UP TO 1"

TDS Revision Date (dd/mm/yyyy): 26/04/2019



SUPERSAND BOND INSTALLATION STEPS (FOR A NEW PAVER SURFACE)

- 1 Spread **SUPERSAND BOND** with hard-bristle broom. Make sure the **SUPERSAND BOND** completely fills the joints. Do not use other materials in the joints.
- 2 Leave a layer of **SUPERSAND BOND** on the surface to aid in vibrating and consolidating **SUPERSAND BOND** into joints. For textured or pre-finished surfaces, we recommend to remove all the sand from the paver or slab surface prior to using the plate or roller compactor.
- 3 Vibrate the **SUPERSAND BOND** into the paver joints using a vibratory plate compactor. A rubber pad is recommended. A roller compactor is best for slab installation.
- 4 Joints should be filled up to a minimum 1/8 inch below the paver surface. It is best to compact in several directions to ensure there are no air gaps or voids in the joints. Repeat steps 1-3 to ensure joints are filled and consolidated. Narrow joints require more care to completely fill.
- 5 Sweep off excess **SUPERSAND BOND** from the paved surface, first with a hard-bristle broom, then a soft bristle broom. Take care to leave the height of the polymeric sand a minimum 1/8 inch below the paver surface.
- 6 Use a leaf blower to remove all remaining **SUPERSAND BOND** residue from the paver surface.

WATER ACTIVATION (IMPORTANT NOTES)

- A Work in manageable sections, ideally about 100 sq. ft. at a time, depending on temperature.
- B Do not allow **SUPERSAND BOND** to wash out of joint.
- C Never allow paved surface to dry out during the water activation phase.
- D Watering must be started at the lowest point of the paved surface.
- E Use a watering gun connected to a hose. Setting should be set to shower.

SUPERSAND BOND WATER ACTIVATION STEPS

- 7 Shower water on a specific water area of 100 sq.ft., wait no longer than 2 to 3 minutes. Proceed to STEP 8.
- 8 Shower and rinse simultaneously on a section of approximately 100 sq. ft. so as to eliminate any **SUPERSAND BOND** residue left on the pavers. Any **SUPERSAND BOND** residue should go directly into the paver joints. Wait no longer than 2 to 3 minutes. Proceed to STEP 9.
- 9 Shower and rinse simultaneously, so as to eliminate any **SUPERSAND BOND** residue. Any residue should go directly into the paver joints. However, stop showering when you see water retention on the paver joints. Wait no longer than 2 to 3 minutes. Proceed to STEP 10. Note: Repeat the directions of steps 7 to 9 for all other areas that have not been showered with water.
- 10 Use a leaf blower to remove any excess water remaining on the paver pores and crevices. This blowing action is necessary to help remove any remaining **SUPERSAND BOND** residue left on paver surfaces from the previous steps.

IMPORTANT:

The water used in steps 7 to 9 will activate a bonding action as well as condensing **SUPERSAND BOND** in the joints. It is important to water the **SUPERSAND BOND** a total of 3 times, as per steps 7, 8 and 9. Too little water will not properly activate the **SUPERSAND BOND** and will reduce the final performance. If steps 7 to 10 are not done properly, a white haze may appear on paver surface after installation. This is due to excess **SUPERSAND BOND** residue left on paver surfaces. This haze will dissipate over time, or it could be removed by using GATOR CLEAN efflorescence cleaner.



**GATOR SUPERSAND BOND
FOR CONCRETE PAVER JOINTS UP TO 1"**

TDS Revision Date (dd/mm/yyyy): 26/04/2019

Page 4 of 5

01



SUPERSAND BOND INSTALLATION (FOR AN EXISTING PAVER SURFACE)

Remove existing jointing material. Be careful not to disturb the bedding material under the pavers. Pavers must be completely dry before installing **SUPERSAND BOND**. Follow **SUPERSAND BOND** installation steps 1 to 4 for a new paver surface.

Typical Properties				
Test	Cure	Method	Value	Unit
Water Penetration	24 hrs	ASTM C-642	<01:00	min:sec
Flexural strength	7 days	BS EN 13892-2	625	psi
Drying shrinkage	25 days	ASTM C-596	0.025	%
Water immersion	7 days	SOP-MP-035	pass	
Resistance to efflorescence	7 days	SOP-MP-036	pass	
Penetration strength	24 hrs	SOP MP-032	93	PSI
Spring drive	24 hrs	SOP MP 032	6	0-200 scale
Abrasion resistance	24 hrs	SOP MP-030	pass	
Erosion resistance	24 hrs	SOP MP-029	<5.0	% lost
Dirt Pick up during installation	N/A	SOP MP-031	2.64	ΔE value

Packaging:	Product	Size	Units per Pallet
	GATOR SUPERSAND BOND - Beige	22.7 kg (50 lb)	56
	GATOR SUPERSAND BOND - Slate Grey	22.7 kg (50 lb)	56

**15 YEAR
LIMITED WARRANTY**

**A D V A N C E D
HAZE FREE
T E C H N O L O G Y**

**WATER
PROOF X
BAG**

15-YEAR LIMITED WARRANTY (RESIDENTIAL)

Please note that this limited warranty applies only when the product is used for residential purposes exclusively (home owners or contractors using the product for single or multi-unit dwellings that are exclusively for residential use). The manufacturer cannot guarantee results as it has no control over surface and sub-surface preparation and product application. (Proper installation of pavers or slabs to ensure long-term stability of work, including granular foundation of certified crushed stone of 0-3/4 inch (minimum of 6 inches), bedding sand layer (maximum of 1 inch) and appropriate installation of reinforced edging in accordance with above specified method for applying product.) Also warranted when used with Gator Base. However, for a period of 15 years from purchase, the manufacturer agrees that if the product is proven to be defective, and on the condition that it was installed pursuant to the method of application of surface and sub-surface preparation described above, then the manufacturer agrees to refund the purchase price. Proof of purchase is required for any claim.



Alliance Designer Products Inc.
225 Blvd. Bellerose West, Laval, Quebec, Canada H7L 6A1
Tel.: 450 624-1611 Fax : 450 624-1622 Toll free : 1 866-212-1611
www.alliancegator.com - Email : info@alliancegator.com



**GATOR SUPERSAND BOND
FOR CONCRETE PAVER JOINTS UP TO 1"**

TDS Revision Date (dd/mm/yyyy): 26/04/2019

Page 5 of 5

01



EXCLUSION OF RESPONSIBILITY

THE PARTIES AGREE THAT REFUND OF THE PURCHASE PRICE AS STATED IS THE ONLY OBLIGATION OF THE MANUFACTURER. IN ALL EVENTS, THE MANUFACTURER SHALL NOT BE LIABLE FOR ANY OTHER DAMAGES OR COSTS WHATSOEVER, (INCLUDING REMOVAL OR REINSTALLATION OF SAND OR PAVERS) DIRECT OR CONSEQUENTIAL. TO THE EXTENT PERMITTED BY LAW, THE MANUFACTURER EXCLUDES ANY IMPLIED WARRANTY OF QUALITY, MERCHANTABILITY OR FITNESS FOR PURPOSE. ALLIANCE DESIGNER PRODUCTS INC. excludes any responsibility whatsoever for the presence of moss, mold, mildew, or similar factors that may occur on the product after its installation. The presence of moss, mold or mildew is caused by the particular on-site conditions, including excess moisture, shade, absence of ventilation, inadequate cleaning or maintenance, presence of soil or other organic debris left on the product after installation. ALLIANCE DESIGNER PRODUCTS INC. excludes any responsibility for use of SUPERSAND BOND for any installation not installed to manufacturer's specifications and ICPI Tech Spec #2.